ALCATEL

Versatis XL 350 / Versatis XL 350 DUO/TRIO

User's Guide

The box contains the following elements:

Versatis XL 350

- the base
- the line cord
- the handset
- the power supply
- the batteries and battery compartment cover
- the mini-guide.

Versatis XL 350 duo/trio

- the additional handset(s)
- the charger(s)
- the battery compartment cover(s)
- the batteries

Please **read this guide carefully** to get to know the main features of your **Versatis XL 350** and read the safety instructions before using it. We would also ask you to share the safety guidelines contained in this guide with all family members, and especially children.

Parents and those in charge of very young children are reminded that they must always be careful not to let children place any metallic objects or plastic items or parts in their mouths, except for safe eating utensils.

Versatis XL 350 / Versatis XL 350 DUO/TRIO

The handset keys

- In standby: open menu
- In menus: confirm an option
- During a call: open Intercom mode, Phonebook, Redial list, or Calls Log*

- Take call
- Flash (access to operator services)*

- Hang up
- Long press: turn handset on/off

- Return to previous menu option
- Correct / Delete a character
- Activate Secrecy (microphone off)
- Make an intercom call

- Long press: lock/unlock keypad
- During a call: three-way conference call

In standby: cut ringer (long press)

Hands-free

Sound experience: select “NATURAL”, “BASS” or “TREBLE” during a call

Open Phonebook

Audio boost

Navigator

In menus: navigation

In standby:

- Press down: open Dialled Calls list

- Press up: open Received Calls list *

During a call:

- Press up: increase earpiece, hands-free or ringer volume

- Press down: lower earpiece, hands-free or ringer volume

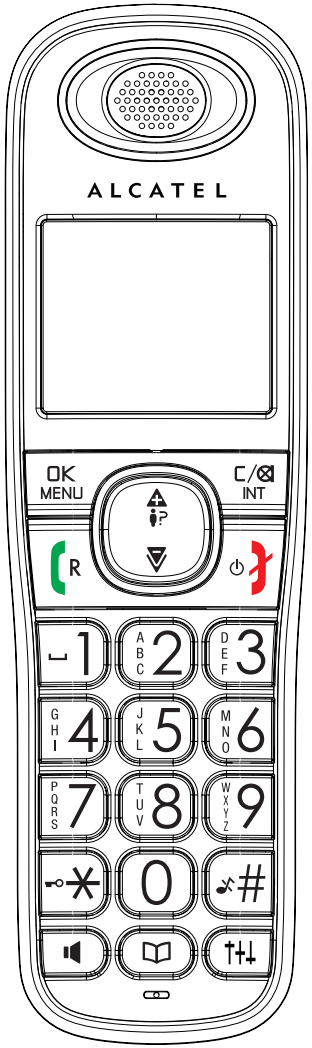

Display and icons

Steady: good signal quality

Flashing: poor signal quality

Absent: out of range (move nearer to the base)

Steady: new call(s) received*

New message(s) on operator voicemail*

Alarm set

Battery charge level OK, needs recharging

Steady: call in progress

Flashing: incoming call

Hands-free enabled

Audio boost enabled

Keypad locked

Ringer off

INT Steady: intercom call in progress

Flashing: incoming intercom call

Base key and LED

On: handset charging or in use

Flashing:

- incoming call

- new voicemail*

- paging handset

- Short press: page handset

- Long press: register handset

Handset LED

Flashing quickly:

- incoming call

- paging handset

Flashing slowly:

message(s) on operator voicemail*

* Subject to availability of service and subscription from your network operator.

1. FIRST USE 2
1.1 Installing the base 2
1.2 Installing the handset 2
1.3 Getting to know your telephone 3
2. USING THE TELEPHONE 3
2.1 Making a call 3
2.2 Answering a call 3
2.3 Hands-free mode 4
2.4 Redialling one of the last numbers called (redial) 4
2.5 Adjusting the volume during a call 4
2.6 Secrecy / Mute (microphone off) 4
2.7 Locating a handset (Paging) 4
3. YOUR PHONEBOOK 5
3.1 Creating entries 5
3.2 Using the phonebook to make a call 5
3.3 Editing entries 6
3.4 Deleting entries 6
3.5 Speed dial keys 6
4. IDENTIFYING CALLERS 6
4.1 Understanding the caller ID information 6
4.2 Viewing the missed calls list 6
4.3 Calls log 7
5. USING THE FIXED-LINE OPERATOR SERVICES 7
5.1 Using the network operator's voicemail service 7
6. CUSTOMISING YOUR TELEPHONE 8
6.1 Ringtones 8
6.2 Sound experience 8
6.3 Date and time 8
6.4 Alarm 8
6.5 Key beeps 9
6.6 Volume 9
6.7 Auto-answer 9
6.8 Display language 9
7. BASE SETTINGS 10
7.1 Changing the PIN code 10
7.2 Restoring the default settings 10
7.3 Line settings 10
7.4 Eco mode 10
8. USING YOUR TELEPHONE WITH MULTIPLE HANDSETS 11
8.1 Registering / Re-registering a handset (Versatis XL 350 duo/trio) 11
8.2 Uninstalling a handset 11
8.3 Using the intercom feature 11
8.4 Transferring calls to another handset / Shuttling between two correspondents 12
8.5 Three-way conference call (2 internal parties and one external) 12
8.6 Answering an outside call while in intercom 12
9. TECHNICAL SPECIFICATIONS 13
10. TROUBLESHOOTING 14
11. PRODUCT WARRANTY 15
12. SAFETY 17
13. ENVIRONMENT 17

1. FIRST USE

1.1 INSTALLING THE BASE

1.1.1 Precautions

Signal quality will depend on the location and environment of the base and handset. Your **Versatis XL 350** must be kept away from sources of excessive heat (radiators, direct sunlight, etc.) and protected against vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimise reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.

To clean your **Versatis XL 350**, use an antistatic cloth lightly moistened with water.

This telephone requires an electrical power supply in order to function.

NB:

Your **Versatis XL 350** is a DECT™* standard appliance designed to receive and transmit telephone calls. It is designed for connection to the European public telecommunications network.

1.1.2 Connecting the base

- Connect the line cord and the power supply under the base, as shown.
- Plug the telephone jack into the wall socket.
- Connect the power cable to a 230V/50Hz power supply.

  ▸ The light on the base comes on .

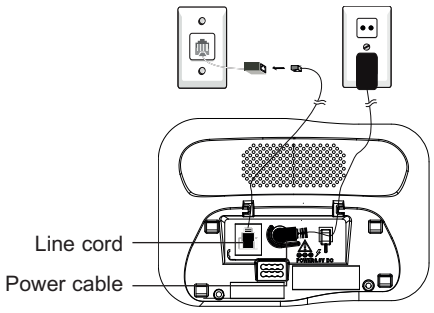

1.1.3 Connecting the charger(s) for the Versatis XL 350 duo/trio

- Plug the power cable into the connector on the charger.
- Connect the mains adapter to a 230V/50Hz power supply.

1.2 INSTALLING THE HANDSET

1.2.1 Fitting the batteries and charging up for the first time

Once the base is connected, open the battery compartment at the back of the handset by sliding the cover.

Insert the batteries and slide the cover back into place.

- Place the handset on the base. The red light on the base comes on and it beeps once.

  ▸ The battery charge icon on the handset starts to move.

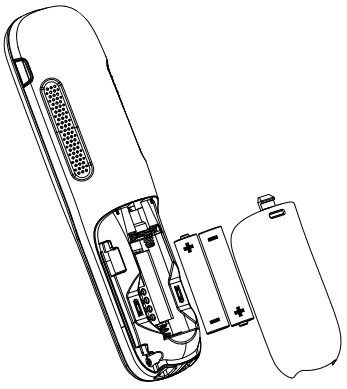

Before using for the first time, we recommend that you leave the handset to charge up on the base for 24 hours in order to optimise battery life and performance.

Make sure the range symbol is on steady. If it is absent, re-register the handset as shown in § 8.1.

Take the line by pressing .

The dial tone confirms that your **Versatis XL 350** is working (if not, see Chapter 10).

* DECT is a registered trademark of ETSI.

! ***Only use rechargeable batteries with exactly the same specifications as those supplied with the product.***

Failure to comply with this recommendation will invalidate the manufacturer's warranty.

Batteries can split or leak if incorrectly inserted, opened or exposed to heat.

Never dispose of batteries in a fire: they could explode.

Using non-rechargeable or non-conforming batteries (see Chapter 9 "Technical Specifications" of the instructions) poses a health hazard and can damage the product.

1.3 GETTING TO KNOW YOUR TELEPHONE

1.3.1 Navigating the menus

Your **Versatis XL 350** is easy to configure and customise.

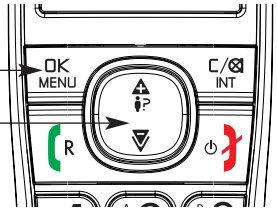

- To open the menu, press OK MENU.
- Using the navigator key, select the desired submenu.

Menu navigation example:

To open the "HS SETTINGS" menu:

- Open "MAIN MENU" by pressing the left context-menu key.
- Scroll through the menus with the navigator key.
  - When you reach the "HS SETTINGS" menu, press OK MENU to confirm.

Use the navigator key to scroll through the menu.

- To confirm an option, press OK MENU.
- To return to the previous menu, press C/⊠ INT.

2. USING THE TELEPHONE

2.1 MAKING A CALL

Direct dialling

- Press the R key to take the line.
- Dial the number to be called.
- Press ⏻ to hang up at the end of the call.

Pre-dialling

With the pre-dialling feature you can enter and modify a number before making the call.

- Dial a number of up to 20 digits.
- If you need to make a correction, press C/⊠ INT.
- Press R to initiate the call.
- Press ⏻ to hang up at the end of the call.

2.2 ANSWERING A CALL

When an external call comes in, the display shows: "CALL".

To take the call:

- Press R.

  or

- Lift the handset off its base (if the Auto-Answer option is enabled) (see § 6.7).

Adjusting the ringer volume when a call comes in

You can adjust the ringer volume with the navigator at any time while the phone is ringing.

The ringer volume is shown on the display. There are 5 volume settings.

2.3 HANDS-FREE MODE

You can press at any time to switch over to hands-free mode.

- ▸ The icon appears on the display.

- To quit hands-free mode during a call, press .
- Use the navigator to turn the hands-free volume up or down.

2.4 REDIALLING ONE OF THE LAST NUMBERS CALLED (REDIAL)

The last 10 numbers dialled on your **Versatis XL 350** are stored in the Dialled Calls list.

The correspondents' names will appear if they are listed in the Phonebook. If not, only the number dialled appears.

To call someone again:

- Press the down arrow on the navigator.
  - ▸ The last number dialled appears on the display.
- Scroll through the names or numbers with the navigator.
- To initiate the call, just press when you reach the name or number you want.

2.5 ADJUSTING THE VOLUME DURING A CALL

During a call, you can adjust the handset volume using the navigator. There are 5 volume settings.

You can also boost the earpiece volume during a call:

- Press the key.

2.6 SECRECY / MUTE (MICROPHONE OFF)

To put your correspondent on hold while you talk privately to someone next to you:

- Press .
  - ▸ This turns off the handset microphone.
  - ▸ "MUTED" appears on the display. Your correspondent can no longer hear you, and you can talk privately.
- Press again to re-activate the microphone.

2.7 LOCATING A HANDSET (PAGING)

Forgotten where you left your handset?

- Press the key on the base.
  - ▸ The handsets associated with the base will ring for 30 seconds.
- Press , or to stop the ringer or press again on the base.

3. YOUR PHONEBOOK

You can store the telephone numbers of your 50 most useful contacts in the Phonebook.

3.1 CREATING ENTRIES

With your **Versatis XL 350** you can key in letters as well as digits. Handy for entering names in the Phonebook!

3.1.1 Basic entry creation

- Press OK MENU.
- Select “PHONEBOOK” with the navigator and press OK MENU to confirm.
- Press OK MENU twice.
- Key in the name and press OK MENU to confirm.

To select a letter, press the corresponding key as many times as required.

For example:

- for the letter S, press 7 PQRS 4 times.

- for the letter E, press 3 DEF twice.

If the next letter you want is on the same key, wait for the cursor to move on first, or use the navigator to move on to the next letter.

To enter a space, press 1.

To make a correction, press C/⌫ INT.

- Enter the number and press OK MENU to confirm.
- Select the melody you want to associate with the contact* and press OK MENU to confirm.
- To exit the menu: press .

*3.1.2 Creating an entry from the Received Calls list**

For more details, see Chapter 4 “Identifying Callers”.

- Press to open the list, and select the contact to be stored in the Phonebook.
- Press OK MENU twice.
- Key in or confirm the name and press OK MENU to save it.
- Press OK MENU to confirm the number.
- Select a melody and press OK MENU to confirm.

3.2 USING THE PHONEBOOK TO MAKE A CALL

- Press .
- Key in the first letter of the name, then use the navigator to pick out the name you want.

  or

- Scroll through the list of names with the navigator.
- Press R to initiate the call.

* This option only works if you are subscribed to your network operator’s caller ID service, where available.

3.3 EDITING ENTRIES

- Press (📖), then use the navigator to select the entry to be modified.
- Press [OK MENU], select “EDIT” and press [OK MENU] to confirm.
- Press [C/⊗ INT] to edit the name and [OK MENU] to confirm.
- Press [C/⊗ INT] to edit the number and [OK MENU] to confirm.
- Select the melody and press [OK MENU] to confirm.

3.4 DELETING ENTRIES

- Press (📖), then select the entry you want to delete.
- Press [OK MENU], select “DELETE” and press [OK MENU] to confirm.

You can also delete all the entries in one go.

- Press the (📖) key, followed by [OK MENU] and select “DELETE ALL”; press [OK MENU] to confirm.

3.5 SPEED DIAL KEYS

You can store 3 numbers on keys [␣1], [ABC 2] and [DEF 3].

- Press [OK MENU], select “HS SETTINGS” and press [OK MENU] to confirm.
- Select “SPEED DIAL” and press [OK MENU] to confirm.
- Select “KEY 1”, “KEY 2” or “KEY 3” with the navigator and press [OK MENU] to confirm.
- Enter the number and press [OK MENU] to confirm.

Note: To erase a number, press the [C/⊗ INT] key.

A long press on [␣1], [ABC 2] or [DEF 3] automatically dials the stored number.

4. IDENTIFYING CALLERS

4.1 UNDERSTANDING THE CALLER ID INFORMATION

If you are subscribed to your network operator's Caller Identification service, you can see the caller’s number (or name, if the number is listed in your phonebook or transmitted by the network) before you answer.

Received calls are recorded in a log which stores the last 20 caller numbers along with their dates & times.

During the call, the following network messages are displayed:

- the caller name and number, if the number is stored in your Phonebook or transmitted by the network,

- the caller number, if transmitted by the network,

- “WITHHELD” if the caller is using Caller ID Blocking to avoid identification,

- “OUT OF AREA” if the name or number was not correctly transmitted by the network.

4.2 VIEWING THE MISSED CALLS LIST

If you are subscribed to your network operator's Caller Identification service, your **Versatis XL 350** will log the last 20 calls received, along with the date and time of each call.

To listen to the calls:

- Press ▲.
- Scroll through the list with the navigator.

4.3 CALLS LOG*

Calling back a correspondent from a Calls List

- Press .
- Once you have selected a call from one of the lists, just press .

Deleting an entry from a list

- Press then select the contact you want to delete.
- Press and select “DELETE”; press to confirm.

Storing a contact from the Calls Log

- Press then select the contact you want to store in the Phonebook.
- Press twice.
- Key in or confirm the name and press to confirm.
- Press to confirm the number.
- Select a melody and press to confirm.

5. USING THE FIXED-LINE OPERATOR SERVICES

Your **Versatis XL 350** gives you direct access to certain services available on subscription from your fixed-line operator. Ask your service provider about the terms and conditions.

5.1 USING THE NETWORK OPERATOR’S VOICEMAIL SERVICE

By subscription to your network operator, you can have your calls diverted to a voicemail box when you are absent or already on the line.

5.1.1 Receiving voicemail messages

When a new message is received on the operator voicemail, the ∞ icon is displayed on the main screen.

5.1.2 Listening to voicemail messages

- Dial your operator’s voicemail number.
- Your **Versatis XL 350** automatically calls up your operator’s voicemail server. Follow the voice guide to listen to your messages.

After you have listened to the messages and hung up, the icon disappears from the main screen. If this doesn’t happen automatically:

- Open the Calls Log and do a long press on 4.

* Subject to availability of service and subscription from your network operator.

6. CUSTOMISING YOUR TELEPHONE

This section tells you how you can personalise your **Versatis XL 350**.

6.1 RINGTONES

The **Versatis XL 350** offers 10 melodies for the handset. You can use different melodies to distinguish between internal and external calls.

- Press OK MENU.
- Select “HS SETTINGS” and press OK MENU to confirm.
- Select “RING SETUP” and press OK MENU to confirm.
- Select “INT. RING” or “EXT. RING” and press OK MENU to confirm.
- Select your preferred ringtone with the navigator and press OK MENU to confirm.

6.2 SOUND EXPERIENCE

For optimal listening comfort, you can increase the bass or treble.

- During a call, press ↑↓ as many times as required to select “TREBLE” (crystalline), “BASS” (warm) or “NATURAL”.

Note: The default setting is “NATURAL”.

6.3 DATE AND TIME

- Press OK MENU to open the menu.
- Select “DATE & TIME” and press OK MENU to confirm.
- Select “DATE FORMAT” and press OK MENU to confirm.
- Select the preferred format and press OK MENU to confirm.
- Then select “SET DATE” and press OK MENU to confirm.
- Enter the date and press OK MENU to confirm.
- Then select “TIME FORMAT” and press OK MENU to confirm.
- Select the preferred format and press OK MENU to confirm.
- Then select “SET TIME” and press OK MENU to confirm.
- Enter the time and press OK MENU to confirm.

> ! ***If you are subscribed to the Caller ID service, the date & time are updated automatically.***

6.4 ALARM

You can program your telephone's “Alarm” function.

- Press OK MENU to open the menu.
- Select “ALARM” and press OK MENU to confirm.
- Select “ON” and press OK MENU to confirm.
  - ▸ The display should look like this:
    TIME: 00:00
- Enter the time when you want the telephone to ring and press OK MENU to confirm.
- Then select “SNOOZE OFF” or “SNOOZE ON” and press OK MENU to confirm.
- To disable the Alarm function, select “OFF” and press OK MENU to confirm.

6.5 KEY BEEPS

The key beeps confirm that the keystrokes have been registered. To access this option, press OK MENU, select “HS SETTINGS”, “TONE SETUP”, “KEY TONE”, then “ON” or “OFF”.

6.6 VOLUME

6.6.1 Ringer volume

- Press OK MENU to open the menu.
- Select “HS SETTINGS” and press OK MENU to confirm.
- Select “RING SETUP” and press OK MENU to confirm.
- Select “RING VOLUME” and press OK MENU to confirm.
- Set the desired volume by pressing the navigator up or down accordingly. There are 5 volume levels plus “VOLUME OFF” (obtained by turning the volume right down). Press OK MENU to confirm.

6.6.2 Ear volume

- Press the R key.
- Then press the navigator to turn the volume up or down.
- Choose the desired volume from the 5 levels available and hang up.

6.7 AUTO-ANSWER

The “Auto-Answer” feature is enabled by default.

It enables you to pick up calls by lifting the handset off the base, without having to press R.

To turn this feature off:

- Press OK MENU to open the menu.
- Select “HS SETTINGS” and press OK MENU to confirm.
- Select “AUTO ANSWER” and press OK MENU to confirm.
- Select “OFF” and press OK MENU to confirm.
- To reactivate the feature, follow the same procedure but select “ON”.

6.8 DISPLAY LANGUAGE

To change the language:

- Press OK MENU to open the menu.
- Select “HS SETTINGS” and press OK MENU to confirm.
- Select “LANGUAGE” and press OK MENU to confirm.
- Choose the language and press OK MENU to confirm.

7. BASE SETTINGS

7.1 CHANGING THE PIN CODE

The confidential system PIN is used for registering new handsets with your **Versatis XL 350**.

- Press OK MENU to open the menu.
- Select “BS SETTINGS” and press OK MENU to confirm.
- Select “CHANGE PIN” and press OK MENU to confirm.
- Enter the 4 digits of the current PIN (0000 by default) and press OK MENU to confirm.
- Enter the 4 digits of the new PIN and press OK MENU to confirm.
  - The display now reads “CONFIRM?”.
- Enter the new PIN again for validation and press OK MENU to confirm.

7.2 RESTORING THE DEFAULT SETTINGS

You can go back to the default settings of your **Versatis XL 350**.

This procedure will erase all the entries in the Calls Log and the Dialled Numbers list.

- Press OK MENU to open the menu.
- Select “DEFAULT” and press OK MENU to confirm.
  - “PIN?” appears; enter the system PIN (0000 by default) and validate with OK MENU. Press OK MENU to confirm.
  - Your **Versatis XL 350** is restored to its default settings.

7.3 LINE SETTINGS

7.3.1 Setting the recall or flash time (R key)

- Press OK MENU to open the menu.
- Select “BS SETTINGS” and press OK MENU to confirm.
- Select “FLASH TIME and press OK MENU to confirm.
- Select the appropriate setting for your country and press OK MENU to confirm.

7.4 ECO MODE

Your DECT wireless handset automatically reduces its transmission power in proportion to its distance from the base, helping to reduce energy consumption.

- Press OK MENU to open the menu.
- Select “BS SETTINGS” and press OK MENU to confirm.
- Select “ECO MODE” and press OK MENU to confirm.
- Select “ON” (to enable the function) or “OFF” (to disable the function) and press OK MENU to confirm.

Note: By default, ECO mode is enabled.

8. USING YOUR TELEPHONE WITH MULTIPLE HANDSETS

8.1 REGISTERING / RE-REGISTERING A HANDSET (VERSATIS XL 350 DUO/TRIO)

You can have up to 5 handsets associated with the base of your **Versatis XL 350**. If you already have 5 handsets registered and want to change one of them, you must first uninstall a handset before installing the new one.

On the base:

- Put the base into registration mode by holding down the key.

Note: The registration operation must be carried out within the next 90 seconds.

On the handset:

- Press OK MENU to open the menu.
- Select “REGISTRATION” and press OK MENU to confirm.
- Enter the PIN code (0000 by default) and press OK MENU to confirm.
- Wait a few seconds.

  ▸ Your handset is now registered.

8.2 UNINSTALLING A HANDSET

A handset can only be uninstalled from another handset.

- Press OK MENU to open the menu.
- Select “BS SETTINGS” and press OK MENU to confirm.
- Select “DELETE HS” and press OK MENU to confirm.
- Enter the PIN code (0000 by default) and press OK MENU to confirm.
- Using the navigator, select the handset to uninstall and press OK MENU to confirm.

8.3 USING THE INTERCOM FEATURE

Calling an internal handset in intercom mode

- Press C/⌫ INT.

  Duo version: the handset automatically calls the other handset.

  Trio version (and beyond): enter the number of the handset you want to call.

  ▸ Pressing 9 calls all of the associated handsets.

Calling an internal handset during an outside call

- Press OK MENU twice.

  Duo version: the handset automatically calls the other handset.

  Trio version (and beyond): enter the number of the handset you want to call. The external correspondent is placed on hold.

Answering an internal call

When you receive an internal call, the screen displays “CALL” and the number of the calling handset.

- Press the R key to answer.
- To hang up at the end of the call, press .

8.4 TRANSFERRING CALLS TO ANOTHER HANDSET / SHUTTLING BETWEEN TWO CORRESPONDENTS

To transfer a call to another handset

- Press OK MENU twice.

  Duo version: the handset automatically calls the other handset.

  Trio version (and beyond): enter the number of the handset you want to call. The external correspondent is placed on hold.
- When the other handset answers, press to transfer the call.
- If the other handset doesn't answer, press to retrieve the external correspondent.

8.5 THREE-WAY CONFERENCE CALL (2 INTERNAL PARTIES AND ONE EXTERNAL)

You can talk with an internal correspondent and an external correspondent at the same time.

When you are on the line with an external correspondent:

- Press OK MENU twice.

  Duo version: the handset automatically calls the other handset.

  Trio version (and beyond): enter the number of the handset you want to call.
- When the other handset answers, press for 2 seconds to open the conference call.
- To interrupt the conference call, press .
- If the other handset doesn't answer, press to retrieve the external correspondent.

8.6 ANSWERING AN OUTSIDE CALL WHILE IN INTERCOM

When you are on intercom with another handset, you can still take outside calls.

To take an incoming call:

- Press .
  - ▸ The internal communication is interrupted.
- Then press .
  - ▸ You are through to the outside caller.

9. TECHNICAL SPECIFICATIONS

Free field range	Up to 300 meters*
Indoor range	Up to 50 meters*
Handset battery life (average values)	10 hours talk time** 100 hours standby**
Number of handsets	Up to 5
Intercom mode	Yes
Three-way conference (1 external + 2 internal parties)	Yes
Electrical connection / Base mains adapter / Charger mains adapter	Manufacturer: ATLINKS Model VT04EEU06045 Input: 100-240V / 50-60Hz / 0.15A Output: 6V DC / 450mA or: Manufacturer: ATLINKS Model S004LV0600045 Input: 100-240V / 50-60Hz / 0.15A Output: 6V DC / 450mA Only use the adapters supplied with the telephone. Single-phase AC, excluding IT installations defined by the EN 60950 standard. Caution: the network voltage is classified as a hazard by the criteria of this standard.
Telephone connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN 60950 standard.
Rechargeable batteries	2 x 400mAh NiMH AAA – 1.2 V
Operating temperature	From 5 to 40°C

* Value may vary according to environment.

** For guidance only: depends on initial battery charge.

10. TROUBLESHOOTING...

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation and disconnect the power supply to the base. Wait for about 1 minute, then reconnect the base and reinstall the handset batteries.

Problems	Causes	Solutions
Nothing appears on the display.	The device is not powered up.	Make sure the batteries are correctly installed. Check the power supply connection.
	The handset has been turned off.	Press or place the handset on its base.
	The batteries are flat.	Put the handset back on its base to recharge the batteries.
There is no dial tone.	The handset is out of range of the base.	Move nearer to the base.
	The handset is not registered with the base.	See § 8.1 “Registering / re-registering a handset”.
	The batteries are flat (icon).	Put the handset on its base to recharge the batteries.
	The device is not connected to the telephone network.	Check that the phone cord is properly connected to the base.
The reception quality is poor, or deteriorates during a call.	You are out of range of the base or in an environment subject to interference.	Move nearer to the base.
	You have an ADSL network connection.	Connect an approved ADSL filter between the phone connector and the wall socket.
Your correspondent can't hear you.	The microphone is off: the Secrecy/Mute function is active.	See § 2.6 “Secrecy / Mute (microphone off)”.
The handset doesn't ring.	The ringer is off.	See § 6.6.1 “Ringer volume”.
The batteries are still flat after several hours on charge.	The base or charger is not powered up.	Check your power supply connections.
	The handset batteries are defective.	Ask your reseller to supply you with new batteries.

The store where you bought your telephone can also provide you with information and after-sales support.

11. PRODUCT WARRANTY

Please read carefully the user's guide included in this package.

The product **Versatis XL 350** is certified as conforming to European technical standards, as evidenced by the CE Mark affixed thereto.

The product you have just bought is a technological product, which must be handled with care.

UK legislation, including Sale of Goods Acts and regulations, imply certain conditions which may apply to the product you have purchased from the retailer (statutory warranty). These include conditions relating to quality.

For information concerning the statutory warranty, please consult the retailer who sold the product to you (seller).

Without prejudice to any statutory warranty from which the product benefits, ATLINKS Europe whose registered office address is at 22 quai Gallieni 92150 Suresnes France warrants that the product contained in this package complies with the technical specifications set forth in the user's guide, during a warranty period commencing on the date of purchase of an unused Product, which shall be presumed to be the date appearing on the invoice or the receipt issued by the seller, upon which appears the seller's name and continuing for:

- Twenty-four (24) months for the telephone, excluding consumables, accessories and batteries.

Together with any claim made under this warranty during the warranty period, the complete Product must be returned to the seller as soon as the defect appears or is discovered, together with proof of purchase, consisting of an invoice or receipt issued by the seller specifying the place of purchase and the serial number of the Product.

Any Product or Product part found, during the warranty period, to have a defect in design, materials or workmanship shall be repaired or replaced, at no cost to you, by a product or part that is identical or at least equivalent in terms of function and performance. If repair or replacement is not possible on a commercially reasonable basis, ATLINKS will refund the purchase price of the Product or replace the Product by an equivalent product.

The repaired or replaced Product or part, which, may be new or refurbished, shall be under warranty for a period of ninety (90) days from the date of repair or replacement, or until the end of the initial warranty period if that exceeds the said ninety (90) days; the warranty period shall also be extended by any period exceeding six days between the date the defective Product is delivered to the seller and the date that the repaired or replaced Product is placed at your disposition.

This warranty does not apply in case of:

- damage caused by installing or using the Product otherwise than in accordance with the instructions contained in the user's guide;
- improper connection or abnormal use of the Product, in particular together with incompatible accessories, as stipulated in the user's guide;
- a Product that has been opened, modified or fitted with unapproved replacement parts;
- removal of the serial number or defacement rendering the serial number illegible;
- normal wear and tear, including normal wear and tear of accessories, batteries and screens;
- non-compliance with technical and safety standards in force in the geographical area of utilization;
- Products having suffered an impact or a fall;
- damage caused by lightning, power surge, proximity to a source of heat or radiation, water damage, exposure to excessive temperature, humidity or other environmental conditions or any other cause external to the Product;
- negligent or defective maintenance;
- damage caused by servicing, modification or repair performed by any person other than an authorized ATLINKS service provider.

If the returned Product is not covered by the warranty, you will receive a repair estimate giving the processing cost and the transport fees that will be charged if you wish the Product to be returned to you.

This warranty is applicable where the Product is lawfully purchased, in the United Kingdom.

All warranties other than the warranty set forth herein are expressly excluded. Nothing in this warranty shall exclude or limit conditions or warranties implied by law including the statutory warranty.

ATLINKS shall:

(a) only be responsible to you for losses suffered by you that are a foreseeable consequence of a defect in the Product;

(b) not be responsible to you for losses that result from a defect in the Product which fall into the following categories:

(i) loss of income or revenue;

(ii) loss of profit;

(iii) loss of business;

(iv) loss of anticipated savings;

(v) loss of data;

(vi) any waste of time; or

(vii) downtime or loss of use;

However this clause shall not prevent claims for foreseeable loss of, or damage to, your physical property;

Nothing in this warranty excludes or limits in any way ATLINKS liability for:

(i) death or personal injury caused by our negligence;

(ii) fraud or fraudulent misrepresentation;

(iii) any breach of the obligations implied by section 12 of the Sale of Goods Act 1979 or section 2 of the Supply of Goods and Services Act 1982;

(iv) defective products under the Consumer Protection Act 1987; or

(v) any other matter for which it would be illegal or unlawful for ATLINKS to exclude or attempt to exclude liability.

12. SAFETY

In the event of danger, the mains adapter acts as 230 V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To cut off the device from the primary power supply, the mains adapter must be disconnected from the 230V AC / 50Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power, or if there is a mains power failure, telephones with cordless handsets will cease to function. You will then be unable to make or receive calls in the event of an emergency. This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

! ***Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.***

It is recommended that you avoid using this device during electrical storms. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller to changer your battery pack.

ATLINKS hereby declares that the **Versatis XL 350** and the **Versatis XL 350 duo/trio** conform to the essential requirements and other applicable provisions of European directive 1999/5/EC.

CE

13. ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions.

- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment in which we live!

ATLINKS

CE

R&TTE DECLARATION OF CONFORMITY (DOC)

We,

ATLINKS EUROPE
22, Quai Gallieni
92150 SURESNES
FRANCE

Declare under our sole responsibility that the products Alcatel Versatis XL 350, Versatis XL 350 Duo, Versatis XL 350 Voice and Versatis XL 350 Voice Duo comply:

- With the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) based on the following standards and other normative documents:
  - EN 60950-1 (2006) + A11 (2009) + A1 (2010)
  - EN 301406 V2.1.1 (2009)
  - EN 301489-01 V1.8.1 (2008) / EN 301489-06 V1.3.1 (2008)

- With Commission regulation (EC) N° 278/2009 of April 6, 2009 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficiency of external power supplies

- With Commission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment.

This conformity is understood as being effective if the product for which it is given is installed and used according to the instructions provided in the user's guide.

Suresnes, October 26th 2011
Didier GOUJARD
CEO ATLINKS EUROPE

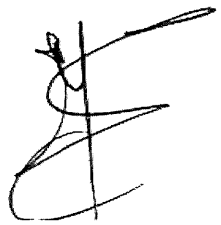

ATLINKS Europe
www.atlinks.com

22, Quai Gallieni - 92150 Suresnes - France

S.A.S. (Simplified Joined Stock Company) with capital of 500 000 euros – Business reg. number: 508 823 747 RCS Nanterre

© ATLINKS 2012 - Reproduction prohibited
The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.
ATLINKS, ALCATEL and VERSATIS are registered trademarks.
The Alcatel logo and Alcatel name are trademarks of Alcatel and used under licence by ATLINKS.

Ref.: 00000000 Rev.0 (EN) 13/01/12